
Bolt Package Includes:

- 1 3/8" x 1-1/2" Hex Head Tilt Steering Arm
- 1 3/8" x 1-3/4" Hex Head Tilt Steering Arm
- 2 Nylon Washers Tilt Steering Arm
- 2 3/8" Stainless Washers Tilt Steering Arm
- 4 5/16" x 3/4" Hex Head Steering Head
- 4 1/4" x 1-1/4" Phillips round head Control Pad
- 4 5/16" x 2" Hex Head Top of the leg
- 4 3/8" x 1" Hex Head ****Bottom of Leg legs can be used as bent in or bent out for the design of the floor of the dinghy****
- 6 3/8" Nyloc nuts
- 8 5/16" Nyloc nuts
- 8 1/4" Nyloc nuts
- 4 1/4" x 20 White Acorn Caps For Bag, Thread Protector
- 1 Top Knight Grease ****BE SURE TO GREASE ALL BOLTS BEFORE ATTACHING NUTS****

Attaching Helm seat to the floor - Use 3M 5200 and sheet metal screw it to the floor if it is a double hull floor or if it is a single hull floor needs to be through bolted with carriage bolts from underneath

****Steering system and steering wheel are not included. We recommend <u>UFlex FourTech</u> <u>Universal Steering System</u>****

Make sure that you put the Nylon washers between the steering arm and the seat base as in the drawing below.

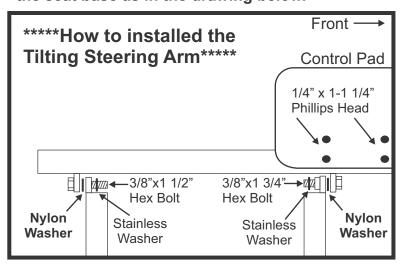



Weaver Helm

Seat Instructions

Weaver Marine Products

Weaver Industries Inc. 6570 W Boekel Rd Rathdrum, ID 83858 (800) 367-4062 • (208) 687-3982 Fax (208) 687-0782

www.weaverindustries.com



 
19"x12.5"x12.5" storage bag with pockets attached underneath the hinged bottom seat.



Attaching Leg, Bag and Pocket

Lay the Helm seat on it's back so that the bottom stays up. Attach the bag and pocket with 1/4" x 20 nylock nuts to the back corners. Next attach the front onto the bolts. Don't tighten the nuts yet, leave them loose. Than use the white 1/4" x 20 acorn caps to cover the threads up.











For 12v Accessories like lights, horn, bilge pump

Three Switch Holder-





