


Weaver Front Arc Instructions

Parts:

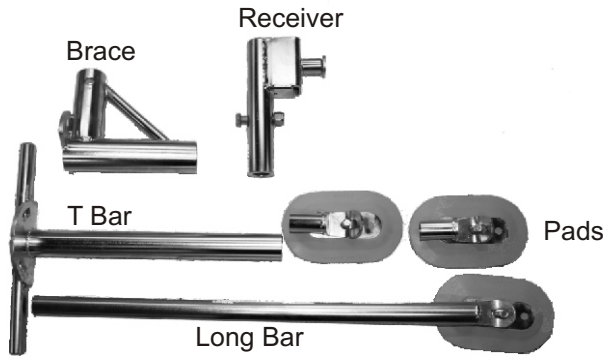

Tools needed:

- (2) 1/2" Wrenches
- (1) 9/16" Wrench
- (1) Glue - Hypalon or 3M 5200

How to Install:

- Step 1: Assemble parts loosely & lay them in the bottom of the boat for positioning (see figure 1).
- Step 2: Set pads in position with the long bar parallel to bottom of the boat, the front pads in tight to the front bar, and the head needs to be 1" from the tube. (see figure 1)
If existing davits are used, be sure to check the distance between davits. If you are installing your davits make sure that arc is forward as far as practical and set davits to the Arcs.
- Step 3: Adjust height of the Arc so the Arc is 1" to 2" above the tube.
- Step 4: Adjust angle of the head so the Arc is level and perpendicular to the swim platform. Not Tube (see figure 1 & 2) Snug all bolts.
- Step 5: Mark pad position and remove for gluing.
3M 5200 or Hypalon Glue may be used. (see gluing instructions)
Sheet metal screws or thru bolts needs to be used for a more secure hold. (see figure 3).
- Step 6: Reinstall everything on the inflatable and tighten everything up.



Figure 1



Figure 2



Figure 3



Weaver Industries, Inc.
6570 W. Boekel Road Rathdrum, ID 83858
(800) 367-4062 • (208) 687-3982 • Fax (208) 687-0782
www.weaverindustries.com